



# ILVE TOEKICK INSTALLATION

If you'd like your ILVE Range to exude a more built-in look when installed between cabinetry, a toekick will conceal the legs.

1. Measure the space between the top of the Oven legs and the floor to ensure there is enough clearance to install the toekick.



2. With a screwdriver, fasten the side guards to the front guard.

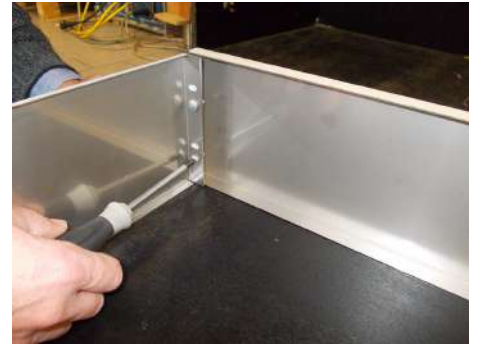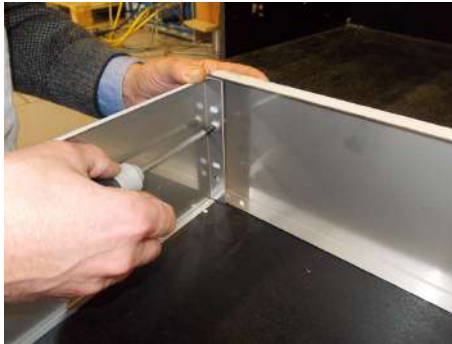

NOTE: There needs to be a half-inch clearance between the range's bottom and the top of the toekick for easy insertion and removal.

3. Insert the toekick between the range bottom and the floor. Be sure hold the toekick above the floor as you insert the piece to prevent scraping damage.



Finally, use a level edge, such as a ruler, and make sure the toekick is flush with the range to your satisfaction.

NOTE: Default installation of ILVE ranges leaves a gap between the range and the toekick. This allows for easy manual removal of the toekick without the use of tools. Additionally, the toekick is not affixed to the range. If the range's height is adjusted, the toekick remains on the floor. As a result, any increase in range height will increase the gap between the range and the toekick. This will partially expose the range's legs.